

# HOME DECORATORS C O L L E C T I O N


BF-24897 MSL ENTRY SHELF DOUBLE 70W×11"H

INV#10361

## ASSEMBLY INSTRUCTIONS














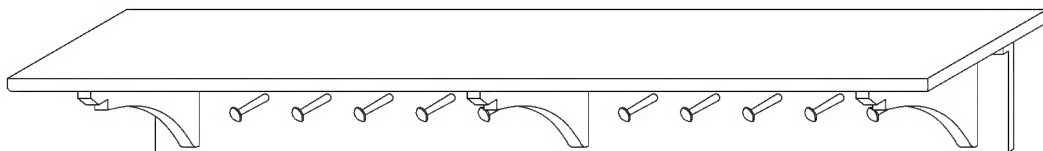Made In China

MAX LOAD: 60LB.

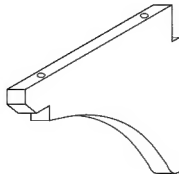


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


PARTS LIST			
<b>A</b>  TOP PANEL-1PC	<b>B</b>  BACK PANEL-1PC	<b>C</b>  STAND PANEL-3PCS	
<b>D</b>  HANGERS-10PCS	<b>E</b> 11mm × 1-1/4"  SCREWS-12PCS	<b>F</b>  ALLEN WRENCH-1PC	
<b>G</b>  GECKOS-16PCS	<b>H</b> 7mm × 1-1/2"  SCREWS-16PCS	<b>I</b> 11mm × 3/4"  SCREWS-10PCS	
<b>J</b>  SCREW COVERS-6PCS	<b>K</b>  SHEET IRONS-2PCS	<b>L</b>  PAPER TEMPLATE-1PC	<b>M</b>  WASHERS-10PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

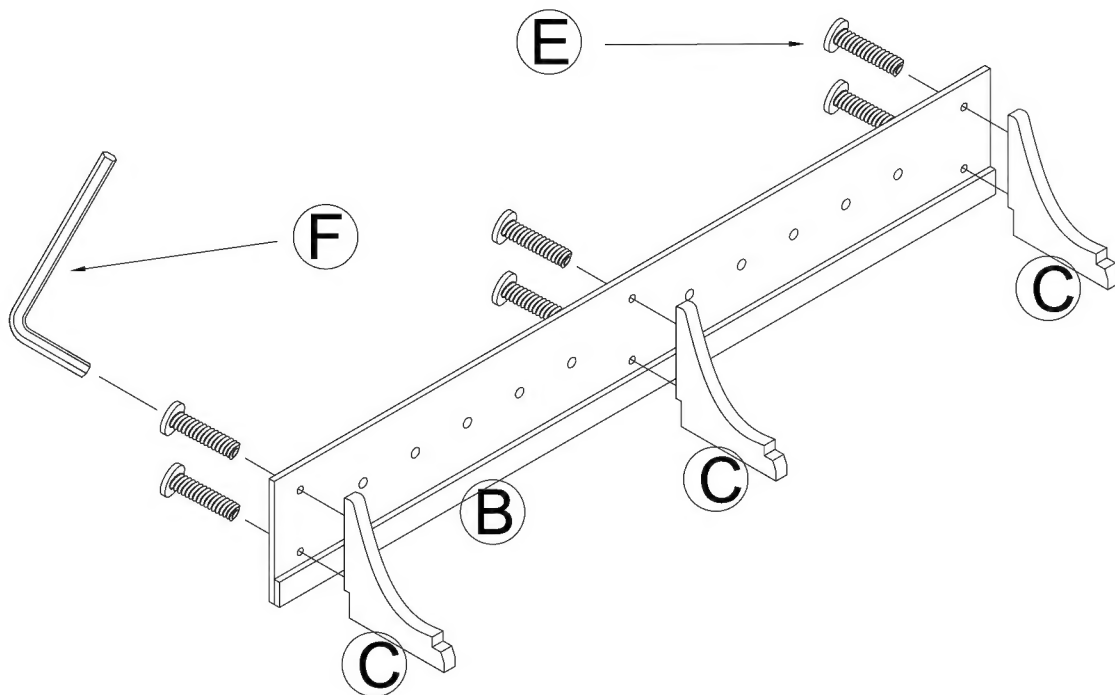


1). ASSEMBLE THE BACK PANEL (B).

- ATTACH THE STAND PANELS (C) TO BACK PANEL (B) USING 6 SCREWS (E).

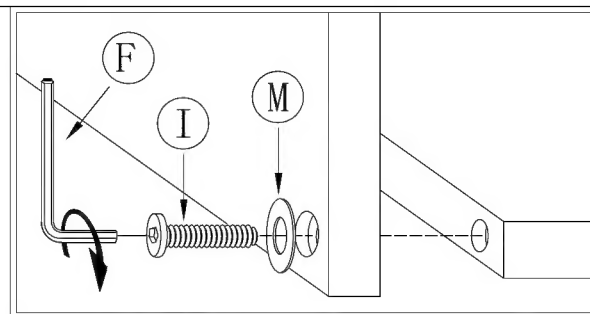


HOW TO USE THE ALLEN WRENCH

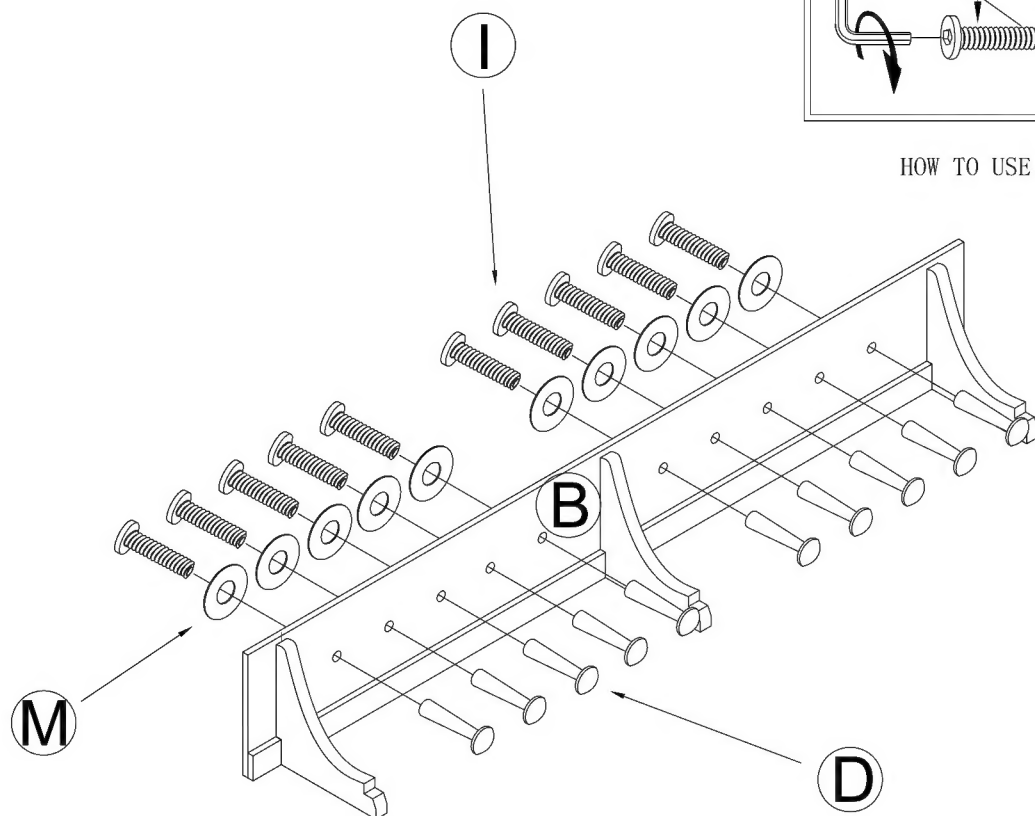


2). ASSEMBLE THE HANGERS (D).

- ATTACH 10 HANGERS (D) TO BACK PANEL (B) USING 10 SCREWS (I) AND 10 WASHERS (M).

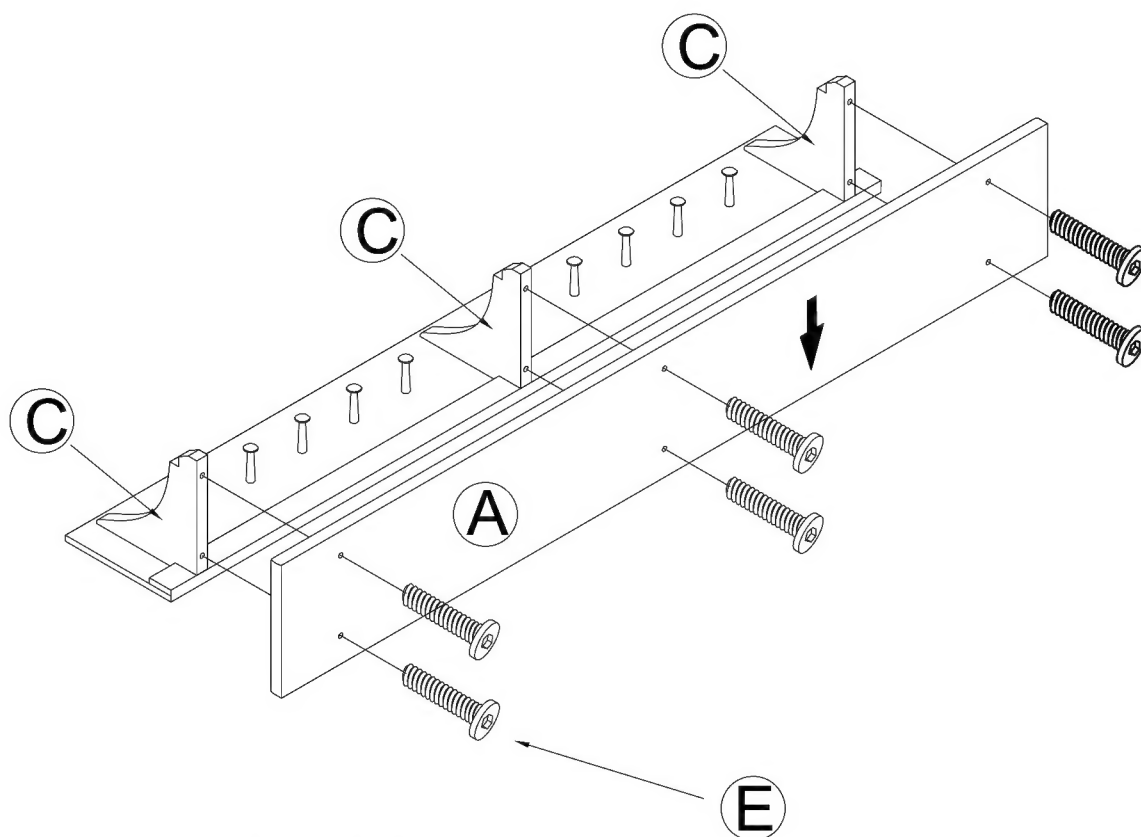




3). ASSEMBLE THE TOP PANEL (A).

- ATTACH THE TOP PANEL (A) TO STAND PANELS (C) USING 6 SCREWS (E).

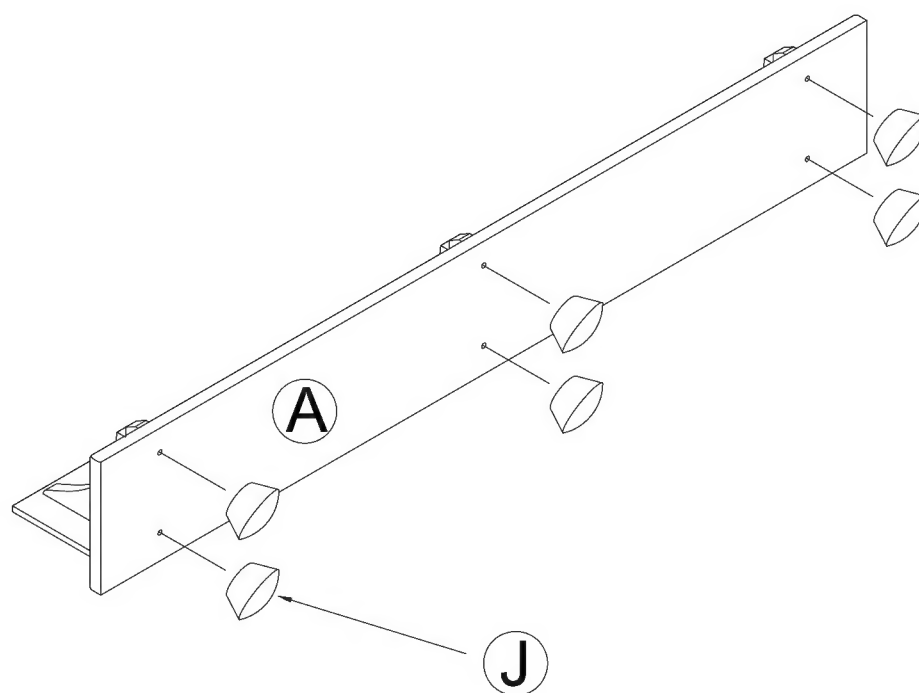

4). ASSEMBLE THE SCREW COVERS (J).

- ATTACH 6 SCREW COVERS (J) INTO THE HOLES IN THE TOP PANEL (A).

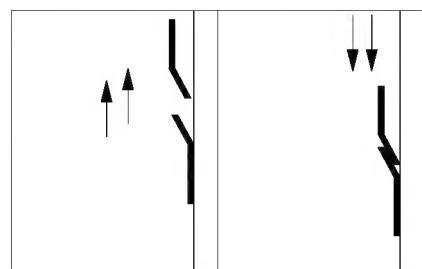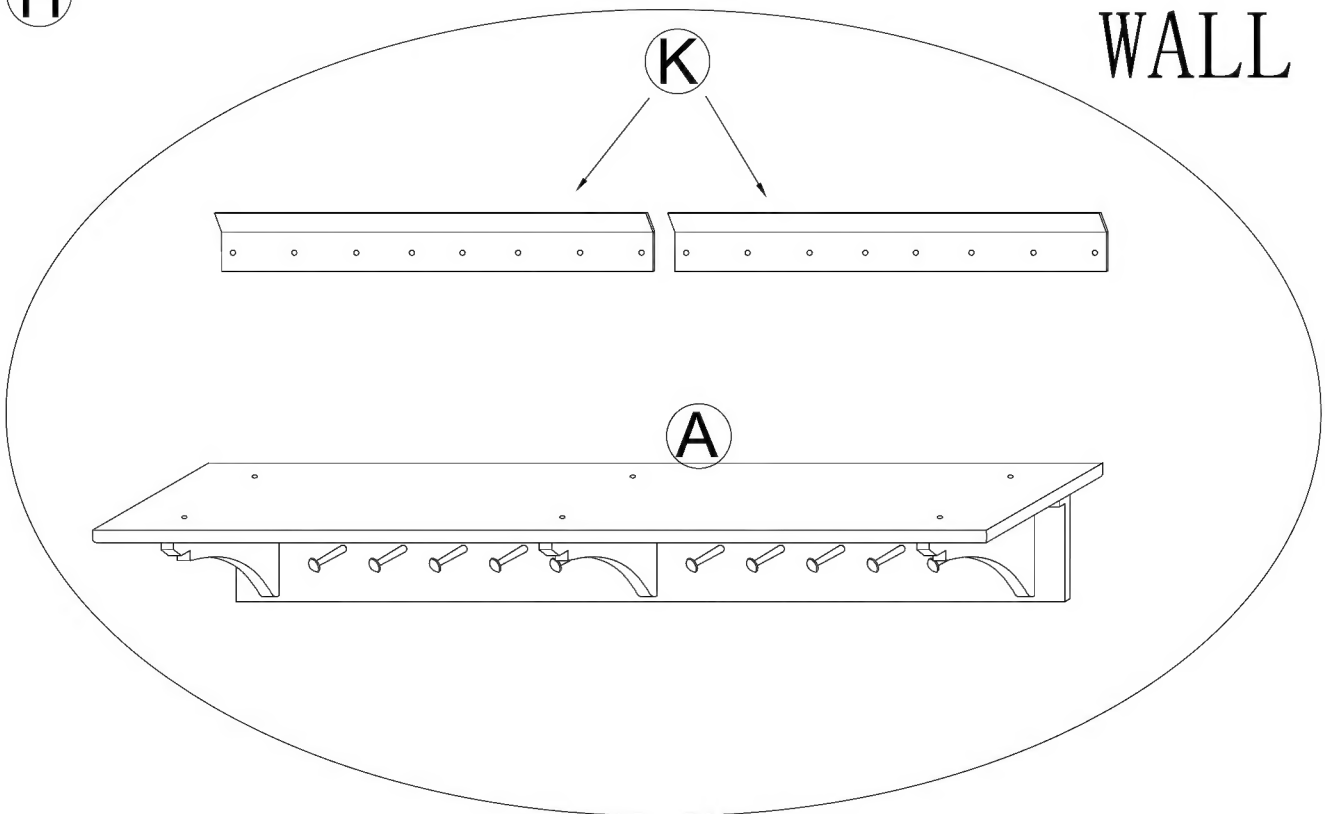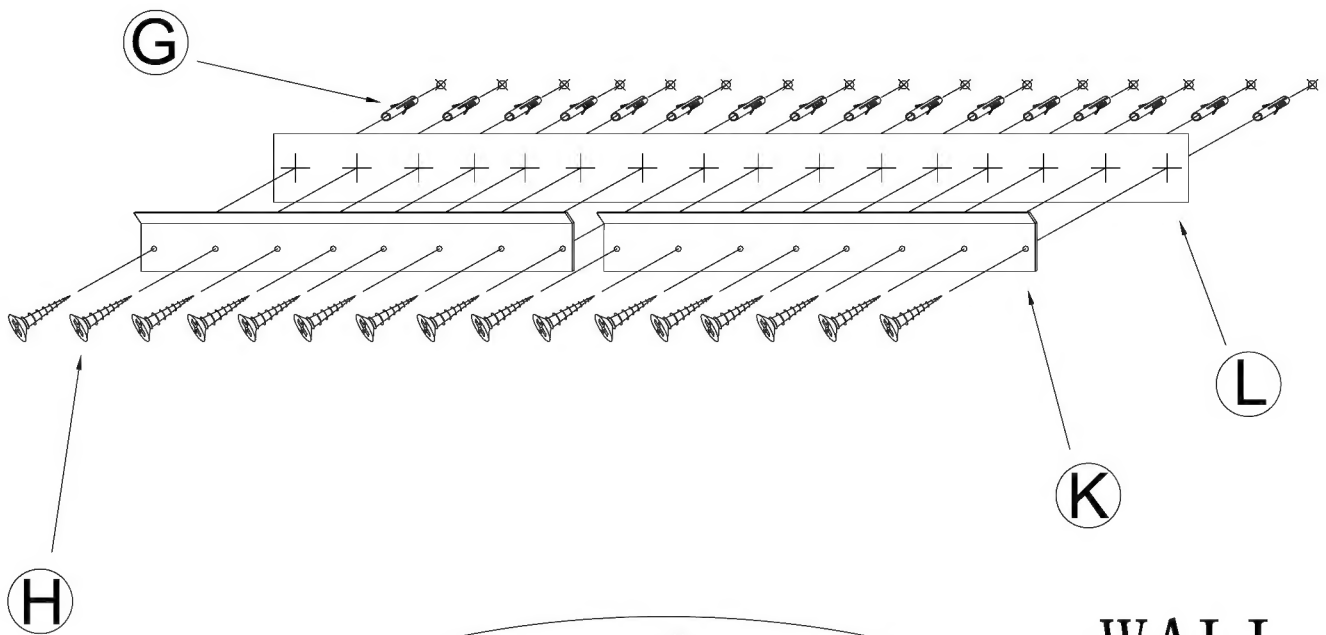

### 5). ASSEMBLE THE SHELF.

- DRILL 16 SMALL HOLES INTO THE WALL EQUAL DISTANCE WITH PAPER TEMPLATE(L) AND AT THE SAME LEVEL.
- TAP 16 GECKOS(G) INTO THE HOLES ON THE WALL. THEN ROTATE 16 SCREWS(H) INTO THE GECKOS(G).
- HANG THE SHELF ONTO THE SHEETIRONS(K).